

CAVE-TEK WP-50 Hybrid Collaboration System

# Quick Setup Guide

# 快速安裝指南




CAVE-TEK LTD.  
sales@cave-tek.com  
www.cave-tek.com



# Package Details

## 產品內容

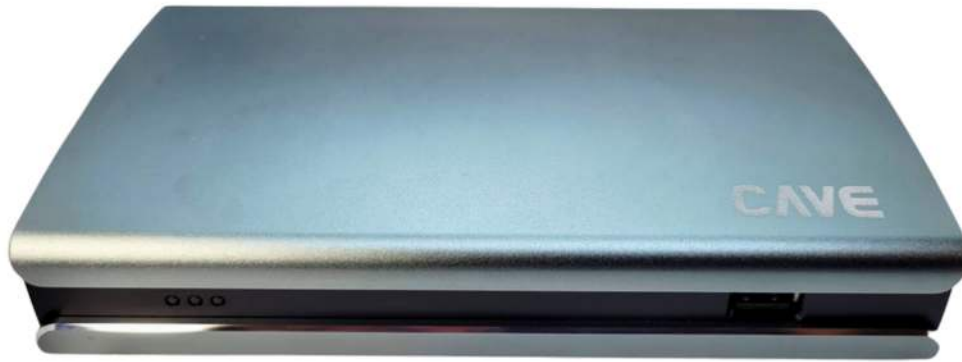

### WP-50 BYOM SYSTEM

#### 無線視訊會議系統



**ANTENNA(X2)**  
天線(X2)



**BYOD / BYOM  
SENDER**  
BYOD / BYOM  
發射器



**SETUP GUIDE**  
安裝指南

 
# Overview

## 產品介紹

### Physical 外觀介紹



**FRONT**  
正面




**BACK**  
背面

| Item | Name              | Description               | 功能                    |
|------|-------------------|---------------------------|-----------------------|
| 1    | USB port (Type-A) | USB Port. (Pairing, BYOM) | USB 孔, 連線配對或連接BYOM設備. |
| 2    | RJ-45             | RJ-45 network.            | RJ-45網路連線.            |
| 3    | HDMI IN           | HDMI Video Input.         | HDMI影線輸入.             |
| 4    | HDMI OUT          | HDMI Video Output.        | HDMI影線輸出.             |
| 5    | 3.5mm Audio Out   | Speaker                   | 喇叭輸出.                 |
| 6    | USB port (Type-A) | USB Port. (Pairing, BYOM) | USB 孔, 連線配對或連接BYOM設備. |

# Quick Setup Guide

## 快速安裝指南

### 1. Connect 連接

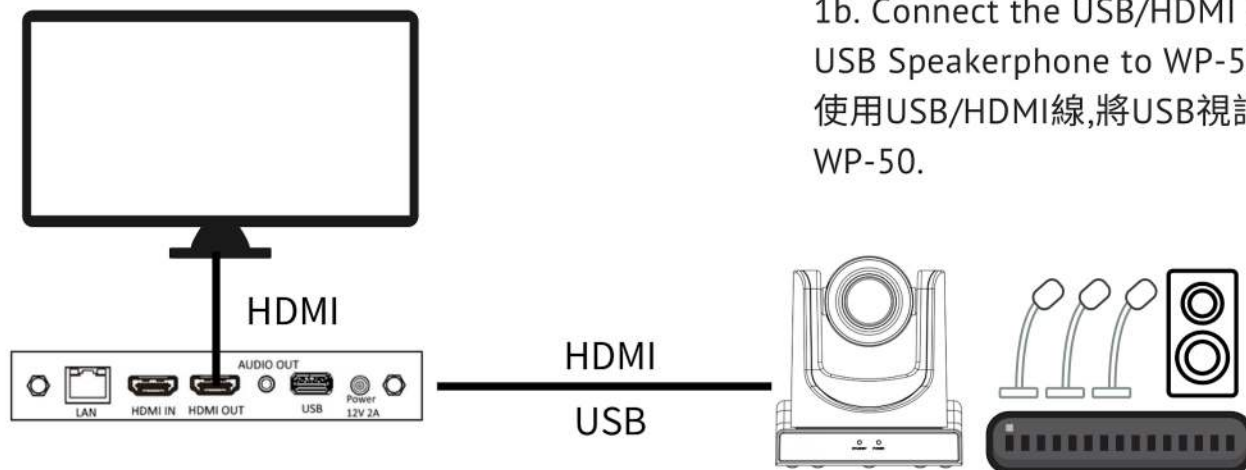

1a. Connect the HDMI (Out) to the display.  
使用HDMI線,將WP-50連線至輸出螢幕.

1b. Connect the USB/HDMI Camera and USB Speakerphone to WP-50. (optional)  
使用USB/HDMI線,將USB視訊設備連線至WP-50.

### 2. Pair 配對



2. Plug the USB BYOD/BYOM button to WP-50 to pair the connection info.

2. 將USB BYOD/BYOM發射器插上WP-50配對連線資訊.

### 3. Plug & Play 開始

#### Software Setup:

Camera: BYOM UVC Camera

Mic/Speaker: BYOM UAC Audio



3a. Plug the USB BYOD/BYOM button into the laptop to start the BYOD/BYOM presentation.

3a. 將USB BYOD/BYOM發射器插上電腦進行BYOD/BYOM簡報及無線視訊會議.

3b. Change the Camera/Mic/Speaker to BYOM device on the UC software.

3b. 將視訊軟體上攝影機/麥克風/喇叭設定切換至BYOM設備.